

5. Operation Steps

- 1) Power the probe: Power the probe with standard adapter;
- 2) Connect to oscilloscope: Connect the BNC end of the probe to oscilloscope channel (make sure the oscilloscope is grounded);
- 3) Select Range: Select appropriate voltage range according to the signal;
- 4) Connect the DUT: Use clips or hooks to connect the DUT, if an over-voltage alarm occurs, disconnect the power supply and the circuit immediately;
- 5) Set on the oscilloscope: Set input impedance to 50Ω, adjust the channel attenuation ratio.

*Note: Try not to use extension leads when measuring, it could bring more noise floor. If must use the extension leads, please twist the leads together to reduce noise, and the input frequency should not exceed 5MHz. If it exceeds 5MHz, the output will have a certain error.

6. Warranty

- 1) Micsig warrants the main body of this differential probe for 1 year.
During the warranty period, Micsig will be responsible for free maintenance for any failure caused by the quality of the product under normal use.
- 2) Under the following circumstances, Micsig will refuse to provide maintenance services or charge for a fee:
 - a. No packaging or anti-counterfeiting label.
 - b. Anti-counterfeit label has been altered or blurred beyond recognition.
 - c. Unauthorized disassembly, such as: changing wires, dismantling internal components, etc.
 - d. No sales voucher or the content of sales voucher does not match the product.

7. Safety Precautions

- 1) Non-professionals do not open the product casing;
- 2) Do not use while case is open;
- 3) Do not touch any bare metal while testing;
- 4) Disconnect the power supply and circuit immediately when over range;
- 5) Do not use in flammable and explosive environments;

Micsig Shenzhen Micsig Technology Co., Ltd.

Tel: +86-755-88600880 Email: sales@micsig.com Web: www.micsig.com
Add: A106, Huafeng Robot Industrial Park, Hangcheng Rd, Bao'an,
Shenzhen, Guangdong, China, 518126

Quick Guide


High Voltage Differential Probe -- DP series

Bandwidth: 300MHz / 400MHz / 500MHz

1. Overview

Micsig high-voltage differential probe -- DP series covering bandwidth from 100MHz to 500MHz, differential voltage up to 7000Vpk. Based on the leading optical isolation probe technology, the DP series has very low noise, excellent amplitude-frequency characteristics and high CMRR.

With standard BNC interface, the DP series can work with any oscilloscope; probe body is only 2cm thick, protected by metal housing, achieves strong anti-interference ability. One-press auto Zero, dual-range and overload alarm design. High impedance designed, the single-ended impedance of the input end to the signal output BNC interface > 8MΩ, single-ended capacitance < 8pF, meets various safety test requirements. 5MHz bandwidth limit function can effectively filter out high-frequency noise and interference, ideal for switching power supplies, various high-frequency and high-voltage floating or isolated signal tests.

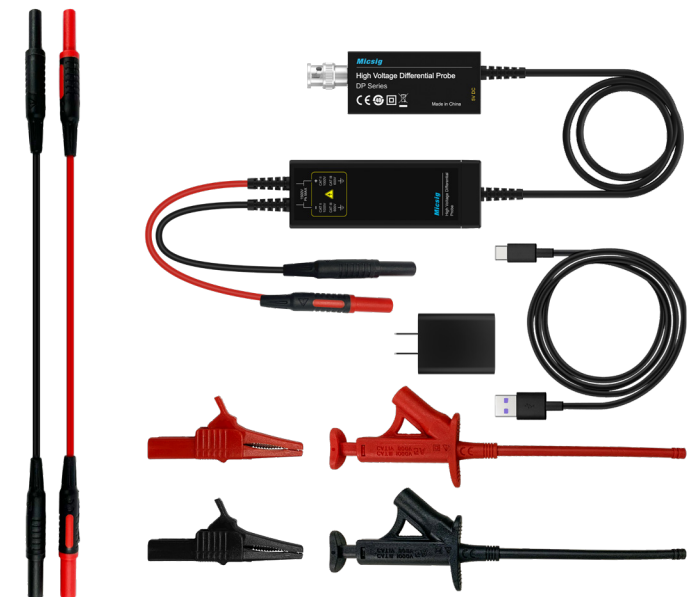

* Extension leads,
twist together can
lower noise


2. Characteristics

Model	DP703	DP704	DP705	DP1503	DP1504	DP1505	DP3003	DP3004	DP3005
Bandwidth	300MHz	400MHz	500MHz	300MHz	400MHz	500MHz	300MHz	400MHz	500MHz
Rise time	≤ 1.2ns	≤ 0.87ns	≤ 0.7ns	≤ 1.2ns	≤ 0.87ns	≤ 0.7ns	≤ 1.2ns	≤ 0.87ns	≤ 0.7ns
Attenuation	20X / 200X		50X / 500X			100X / 1000X			
Accuracy	±2%		±2%			±2%			
Max. input Differential Voltage (DC+AC PK)	70V (20X) 700V (200X)		150V (50X) 1500V (500X)			300V (100X) 3000V (1000X)			
Max. Voltage to ground	600V (CAT I) 450V (CAT II)		1000V (CAT II) 600V (CAT III)			1000V (CAT III)			
Noise	Full Bandwidth: 20X: ≤ 80mVrms 200X: ≤ 100mVrms		Full Bandwidth: 50X: ≤ 200mVrms 500X: ≤ 250mVrms			Full Bandwidth: 100X: ≤ 400mVrms 1000X: ≤ 500mVrms			
CMRR	DC : >-80dB 100kHz: >-70dB 20MHz: >-40dB 120MHz: >-26dB		DC : >-80dB 100kHz: >-70dB 20MHz: >-40dB 120MHz: >-26dB			DC : >-80dB 100kHz: >-70dB 20MHz: >-40dB 120MHz: >-26dB			
Delay time	8.44ns(20X) 7.9ns(200X)		8.44ns(50X) 7.9ns(500X)			8.44ns(100X) 7.9ns(1000X)			
Input impedance	16MΩ/0.5pF(differential) 8MΩ/1pF(each input to ground)		16 MΩ/0.5pF(differential) 8MΩ/1pF(each input to ground)			20MΩ/0.5 pF(differential) 10MΩ/1pF(each input to ground)			
Output voltage	≤ 3.5V		≤ 3V						
Output impedance			50Ω						
Power supply			DC 5V						
Overrange			LED flashes, Buzzer beeps						
Dimensions			Control module: L*W*H: 91 *33 *15 /mm Signal box: L*W*H: 100 * 36 * 20 /mm						
Cable length			Approx. 8 cm (Input); Approx. 120cm (Output)						
Temperature			Operating: 0°C ~ 40 °C Non-operating: -30 °C ~ 70 °C						
Humidity			Operating: 5 ~ 85% RH (0°C ~ 40 °C) Non-operating: 5% ~ 85% RH (≤ 40 °C) ; 5% ~ 45% RH (40 °C ~70 °C)						


3. Appearance

DP differential probe mainly consists of control module and signal box.

Control Module

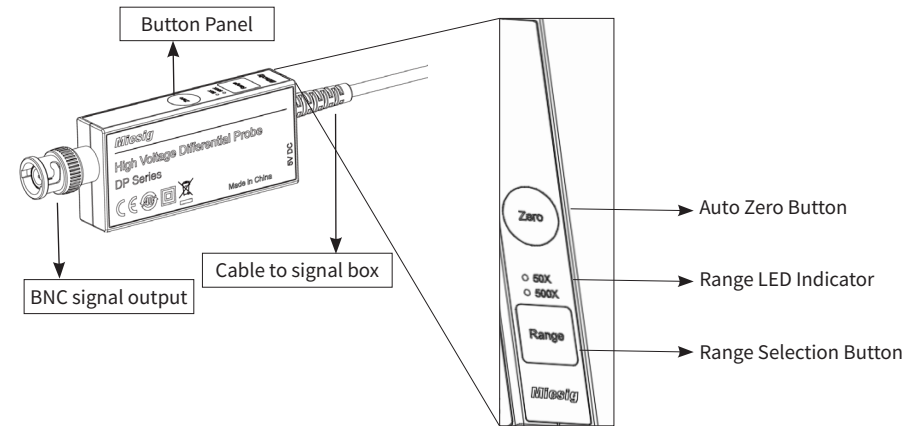

Signal Box

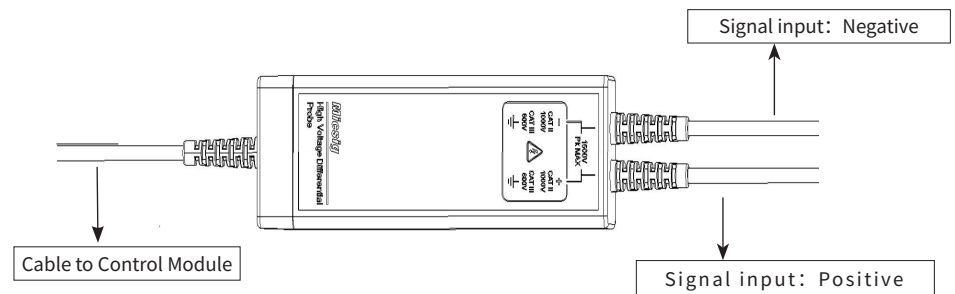

4. Precautions

- 1) The bandwidth of the oscilloscope should be no less than the bandwidth of the probe, channel input impedance should be 50Ω.
- 2) Calibrate the probe before use:
Short-circuit the input ends, power on, press “Zero” button, 5MHz LED light flashes, after hearing a “Di” sound, means calibration succeeded; if hearing “Di Di Di” sound, means calibration failed, needs to be calibrated again;
- 3) Recommend to use after 10 mins warm-up to get more accurate result.
- 4) When Range LED indicator flashes and beeps rapidly, indicating Overvoltage warning, please switch to higher range.