




www.jbctools.com

INSTRUCTION MANUAL

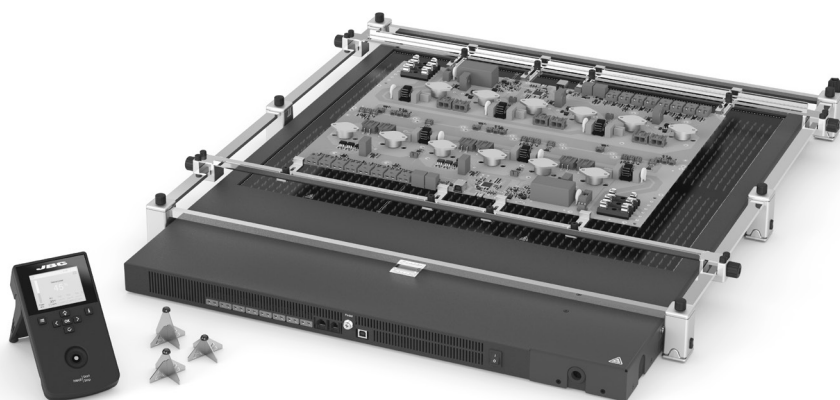

PHXLE-K

XL Preheater Set

Packing List

The following items are included:



XL Preheater Unit 1 unit



XL PCB Support 1 unit
Ref. PHXL-SA



Console 1 unit
Ref. ACE-A



Metallic Supports for PCB
Ref. PH201..... 4 units
Ref. PH202.....4 units
Ref. PH203.....4 units




RJ45 Cable 1 unit
Ref. 0019914



Kapton Tape 1 unit
Ref. PH217




Thermocouple 3 units
Ref. PH218

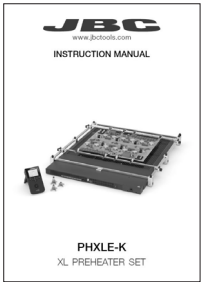


Manual 1 unit
Ref. 0026284

Features and Connections


Heater Unit

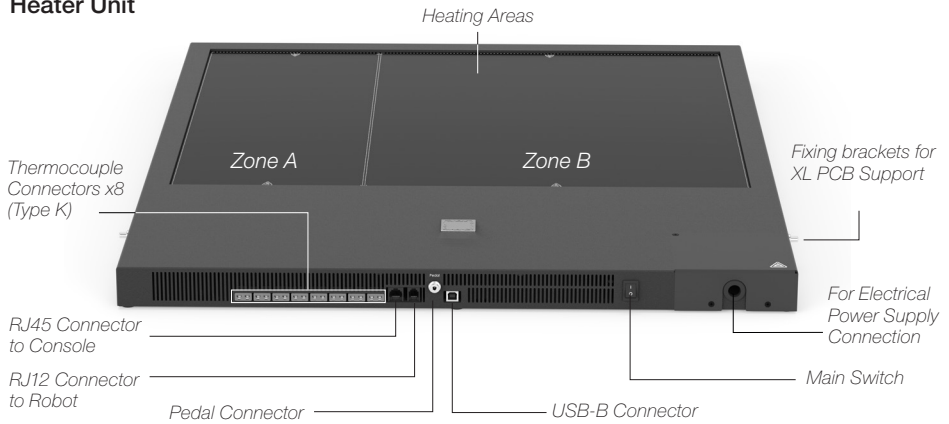


Console

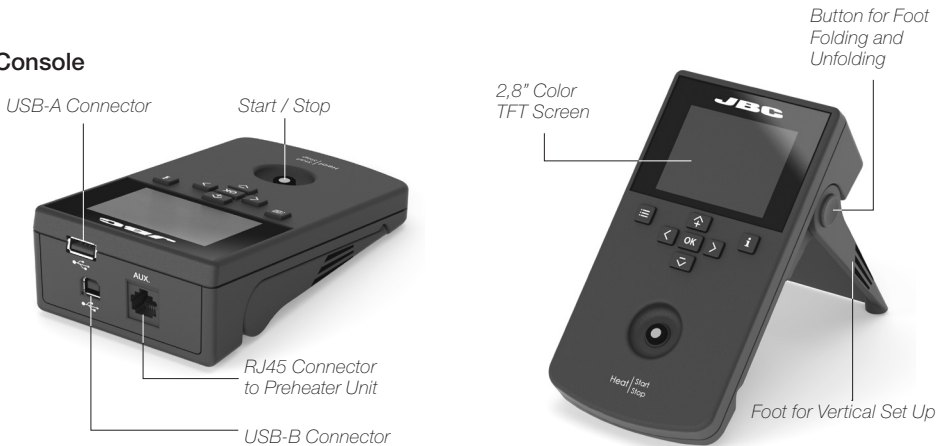

Support

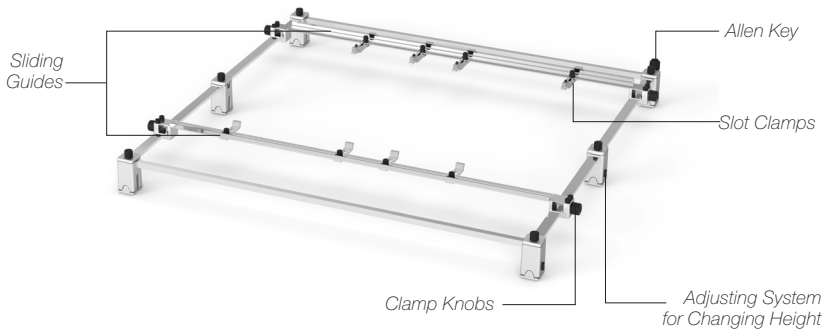


Connection to Power Supply

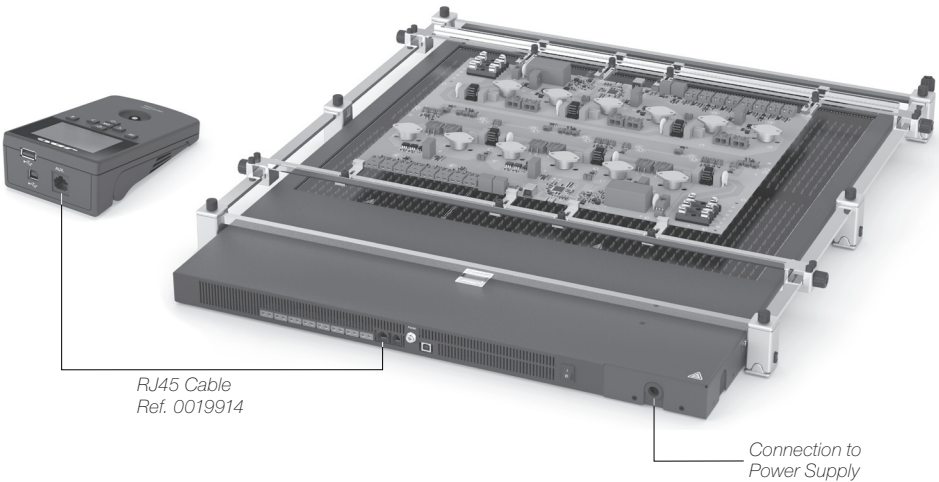


PHXLE-KA can be connected to single-phase or three-phase networks. A power supply cable is required. Use the following table to determine the cable size and connection:

	Peak Current		Cable Connection Wire Section	
	Single-phase	Three-phase	Single-phase	Three-phase
230V	30 A	10 A	4mm ²	1 mm ²
100V/120V	60 A	20 A	10 mm ²	2,5mm ²


To connect your power supply cable to the Heater Unit do as follows:

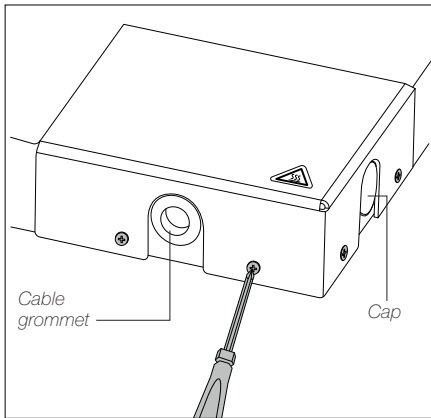

1. Unscrew the four screws and remove the cover. The cable can be inserted through the front or the side part of the Heating Unit, all you have to do is replace the cap with the cable grommet.

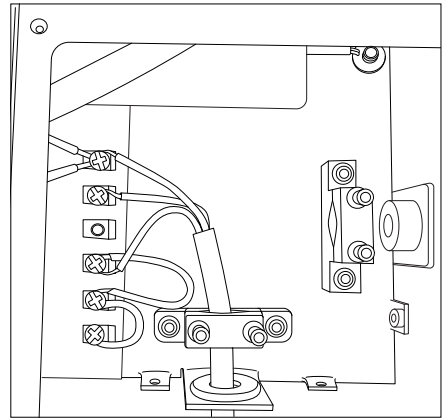

2. Insert the cable through the cable grommet and the flange and fix it with the allen screws. (Image shows single phase connection).

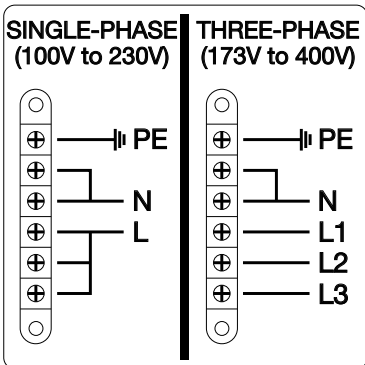


3. Connect the cables as the Scheme and reassemble.

Height Adjustment

PHXL-SA allows adjustment to **3 heights** between the PCB and the heating area of the Preheater. Select the adequate PH201, PH202, PH203 for your working level. Arrange the selected supports between the PCB and the Preheater to stabilize the PCB so as to avoid PCB deformation.


Low level

28 mm

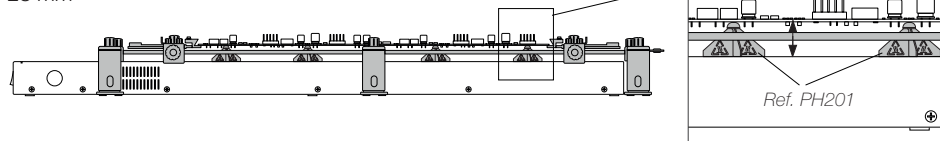


Medium level

38 mm

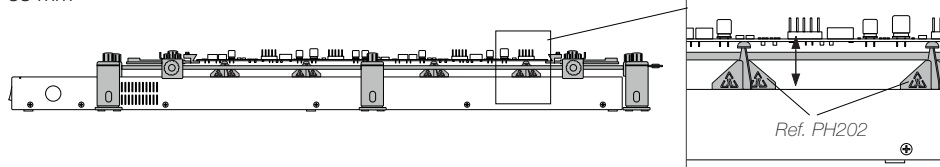


High level


48 mm

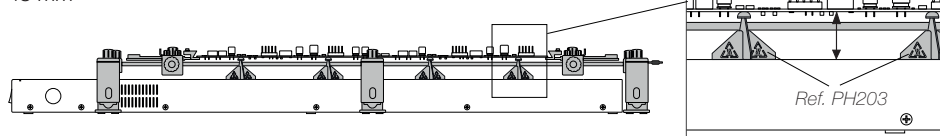

To change the height, do as follows:

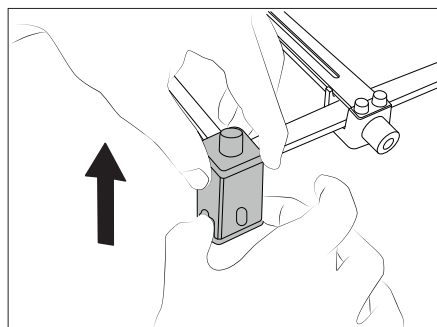

To raise the support, hold the base and pull up.

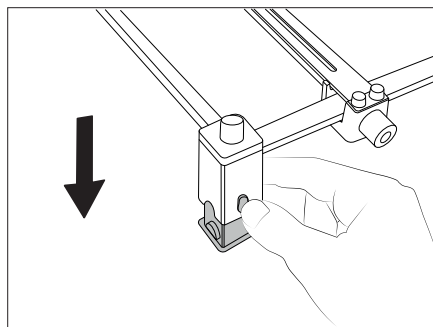


To lower the support, press the button and move down.

Fast PCB Replacement

The support lets you replace PCBs of the same batch fast and easily.
Use the sliding guides to change the PCBs.



Removing the PCB

Loosen one sliding guide, pull back and lift out the PCB.

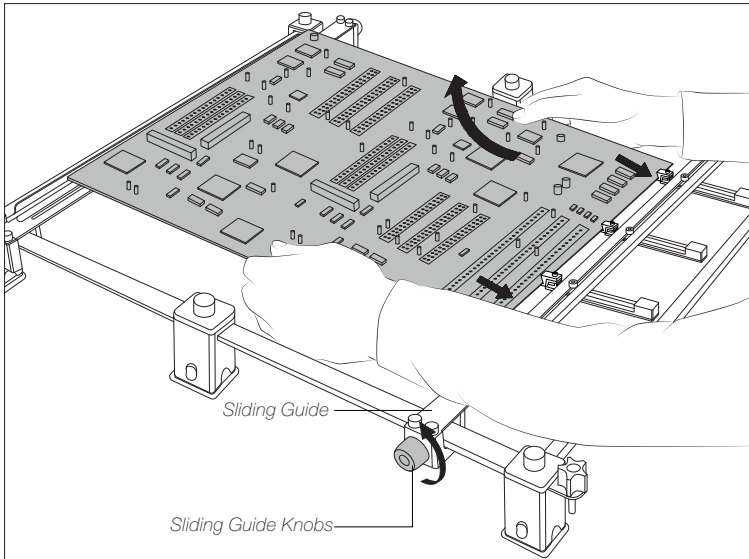

Placing another PCB


Position it and tighten the sliding guide knobs.

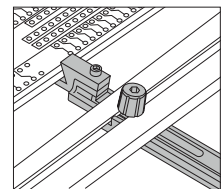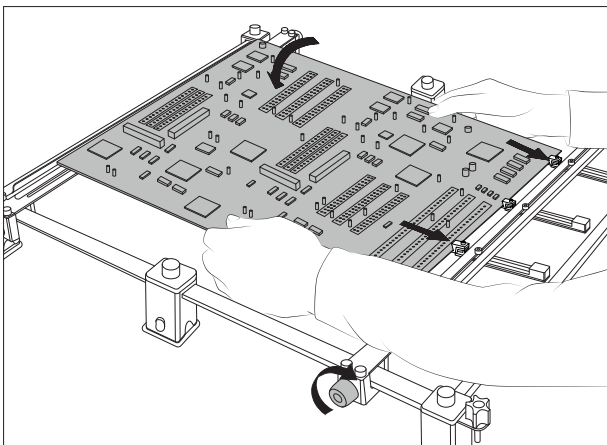

Adjustable slot clamps
for switching PCBs

Work Screen

The Console offers an intuitive user interface which provides quick access to station parameters.

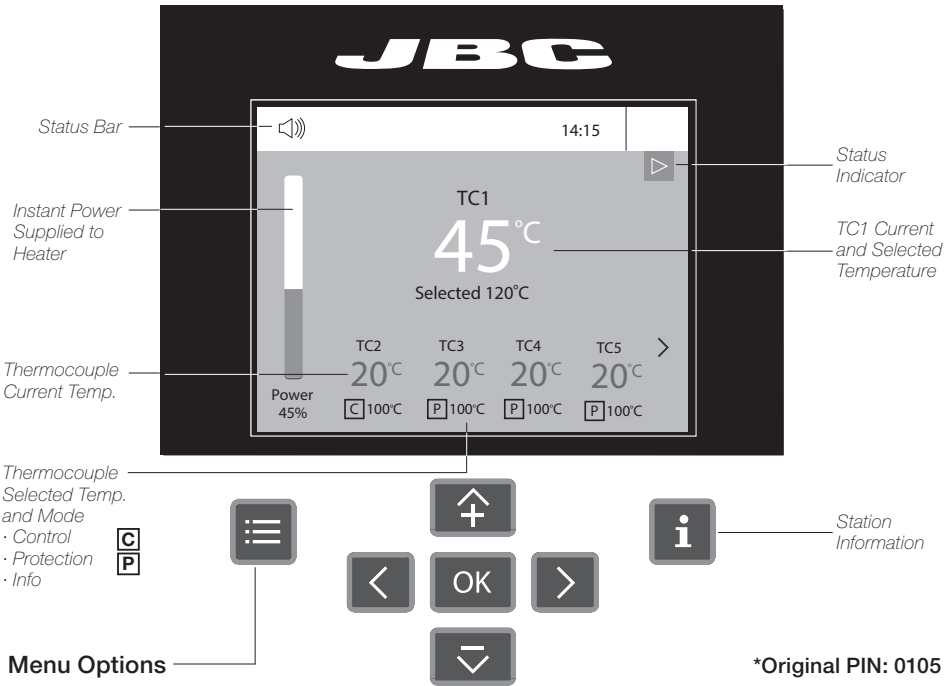

*Original PIN: 0105



General



Work mode



Profile editor



Graphics



Files



Reset

System notifications (Status Bar)



USB flash drive is connected.



Station is controlled by a PC.



Station is controlled by a robot.



Station software update.
Press INFO to start the process.



Warning.
Press INFO for failure description.



Error. Press INFO for failure description,
the type of error and how to proceed.

Available languages: English, Spanish, German, French, Italian, Portuguese, Japanese, Chinese, Russian and Korean.

Troubleshooting

Station troubleshooting available on the product page at www.jbctools.com

Setting Thermocouples Function

Select *Thermocouples* from the *Work mode* menu to set them up.


The thermocouples (TC) can work in three different ways depending on what is needed.

- [C]** · Control: the unit maintains the selected temperature.
- [P]** · Protection: the Heater Unit stops if the TC reaches the selected temperature.
 - Info: the TC temperature is shown in the work screen.

The TC1 is always working in Control mode for the *Temperature* mode as well as for *Profiles* mode. The temperature of each TC can also be selected from the work screen.


Recommended Guidelines

1. Place the Control Thermocouple as near as possible to the component being worked on.
2. If there are any sensitive components, use a Thermocouple as protection.
You can select the protection temperature in the *Thermocouples* menu. If the selected temperature is reached, the Heater Unit will stop the process and a warning message will be shown.

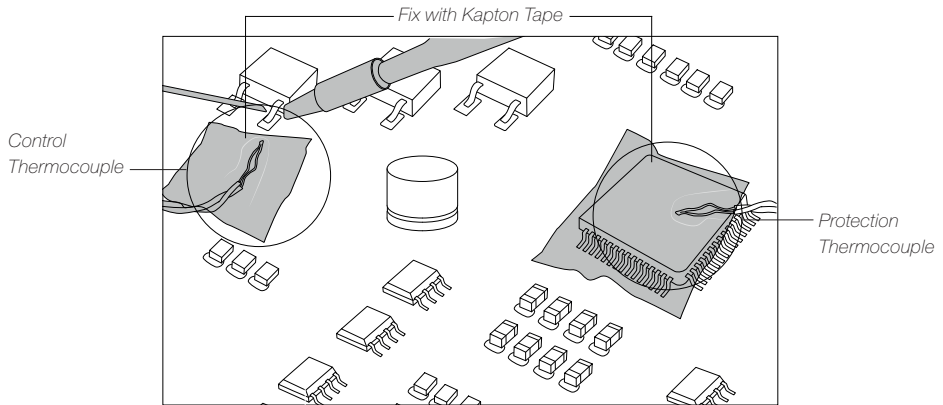

3. IPC* does not recommend exceeding ramp-up rates over 3 - 4 °C / sec (5 - 7 °F / sec) so as to reduce the risk of thermal stress on the PCB.


*IPC was founded in the U.S. in 1957 as the Institute for Printed Circuits and is committed to becoming the most recognized international industry association for the electronics manufacturing industry.

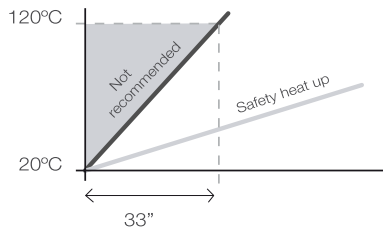

Work Mode


Temperature Mode

Select *Temp. mode* from the *Work mode* menu. In this mode the heater unit maintains the selected temperature for the TC1 thermocouple as long as the other TC's do not reach the control/protection temperature limit.

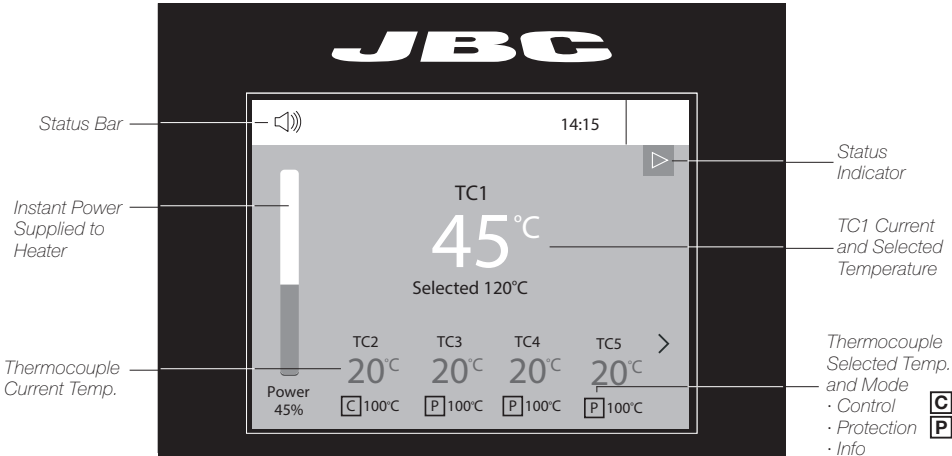


Power Mode

Select *Power mode* from the *Work mode* menu. In this mode the heater unit maintains the selected power as long as the thermocouples do not reach the control/protection temperature limit.

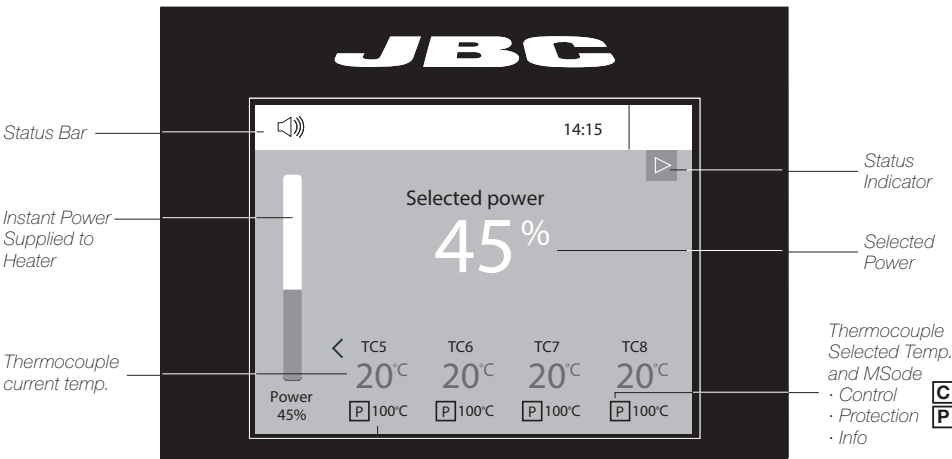

Profile Modes

Select *Profile Mode* from the *Work Mode* Menu. In this mode the heater unit regulates the temperature of the TC1 thermocouple according to the selected profile as long as the other TCs do not reach the control/protection temperature limit.

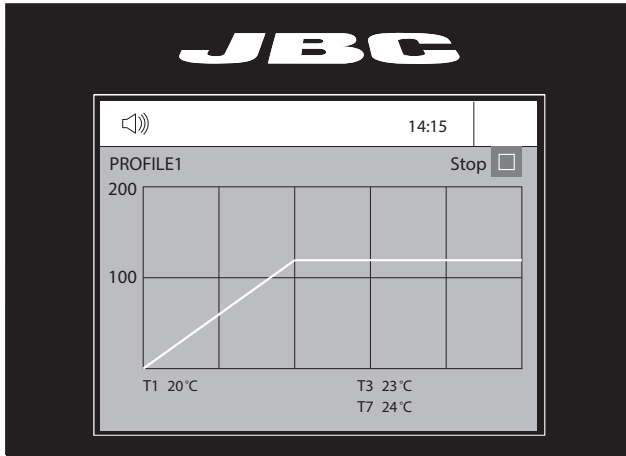

Teach Profile

For repetitive jobs **you** running profiles without the Thermocouple (TC). In order to do so, the *Teach profile* mode has to be executed before running any profile. It can be executed from the *Work mode* menu if the *Profiles* mode is selected. Once the profile has been run to the end, the system has all the process data which you can save.

Once it is saved, you can run this profile without connecting the Thermocouple (TC). The heating process will be the same as long as the same working conditions are respected.

The profiles which already have the data from the *Teach profile* are marked with this symbol

These profiles can be run either with or without the Thermocouples. It can be chosen from the *Profiles* mode work screen:




Profile Editor



Profile Editor


The *Profile editor* can be opened from the main menu or from the *Profiles* mode work screen by pressing the 'OK' button.
In this mode you can **edit** as many as 25 profiles of temperature.

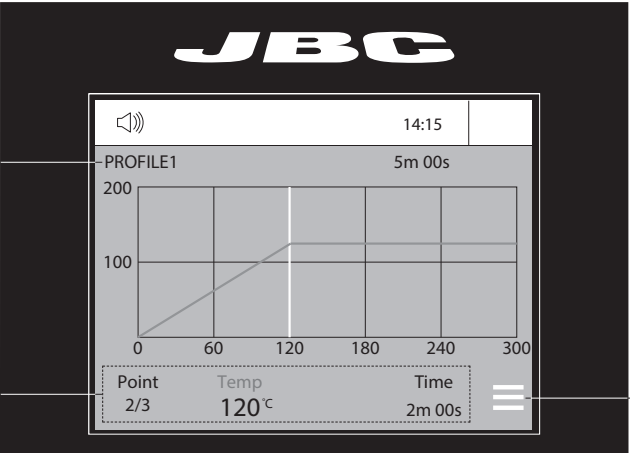

- Menu Options**
- Add Point
 - Delete Point
 - Load Profile
 - Save Profile
 - Exit

JBC Set Profiles

There are 3 profiles predefined by JBC: A, B and C. The difference between them is the number of steps: 2, 3 or 4. The thicker your PCB is and the more layers it contains, the more steps are needed to obtain a gradual warming.
These profiles are not modifiable but can be used as a template to create your own profiles.

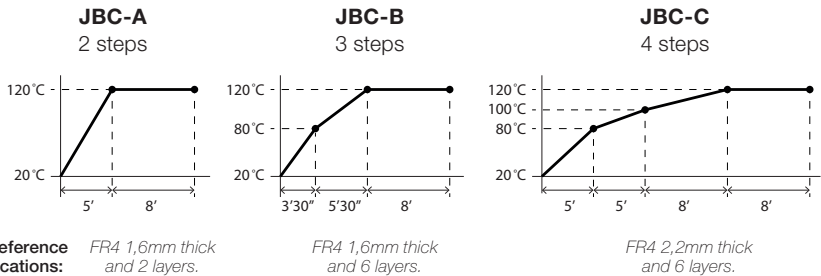


Profiles set using the low position of the PHXL-SA Support (28 mm in height between the PCB and the heating area).

Process Analysis



Graphics

By pressing **Graphics** in the main MENU, temperature of TC1 thermocouple and power figures in real time are displayed.

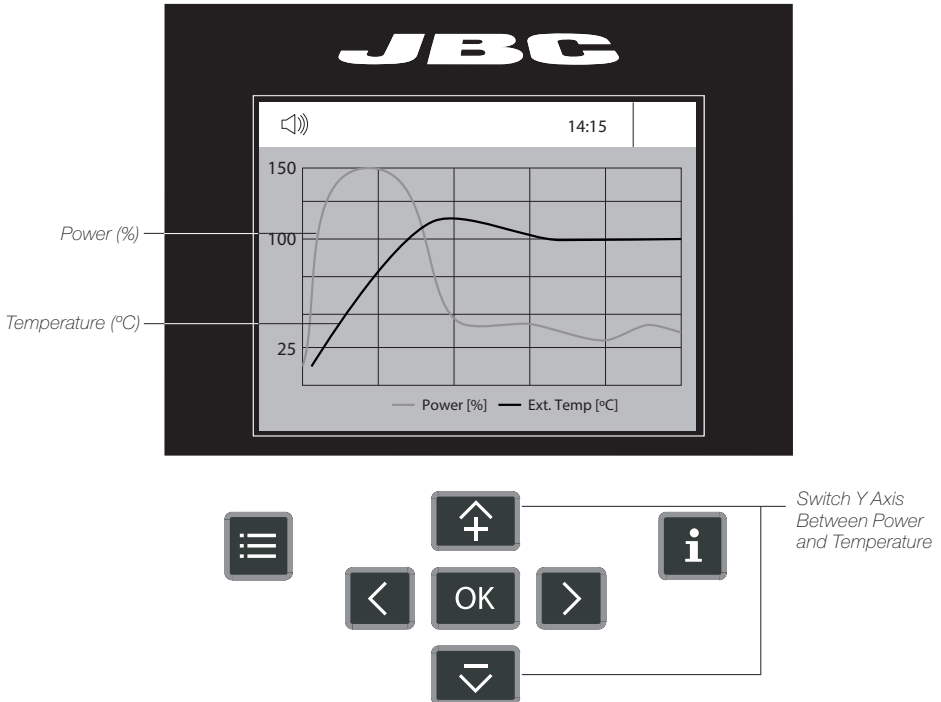

System Notifications

The following icons will be displayed on the screen's status bar.



USB flash drive is connected.



Station is controlled by a PC.



Station is controlled by a robot.



Station software update.
Press INFO to start the process.



Warning.
Press INFO for failure description.



Error.
Press INFO for failure description,
the type of error and how to proceed.

Files




Files

Export Graphics

Insert a USB flash drive into the USB-A connector to save your soldering process in csv format.


Export / Import Profiles



Insert a USB flash drive into the USB-A connector to export / import profiles.

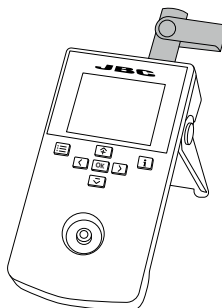

Update the Station Software

1. Download the JBC Update File from www.jbctools.com/software.html and save it on a USB flash drive. (Preferably one with no other files).

2. Insert the USB flash drive to the console. The icon  is displayed while updating.

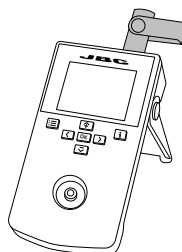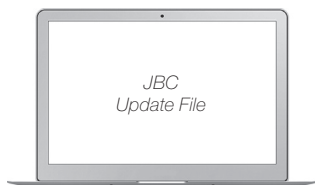

Working with Pedal

Press the pedal to start heating and press again to stop as if it was the button on the console. Once the Work Mode is set, the Heater Unit can work without the console using the pedal.



Maintenance

Before carrying out maintenance or storage, always allow the equipment and the support to cool down.

- Check periodically that the Pre Heater is clean.
- Use a damp cloth when cleaning. Alcohol can only be used to clean the metal parts.
- Only if it is absolutely necessary and if cleaning with isopropyl alcohol (IPA) is not enough, it is recommended to use a scraper to remove dirt in the glass area.
- Replace any defective or damaged parts. Use original JBC spare parts only.
- Repairs should only be performed by a JBC authorized technical service.

Safety



It is imperative to follow safety guidelines to prevent electric shock, injury, fire or explosion.

- Do not use the units for any purpose other than PCB preheating. Incorrect use may cause fire.
- The mains cable must be plugged into approved bases. Make sure that it is properly grounded before use. When unplugging it, hold the plug, not the wire.
- The temperature of accessible surfaces may remain high after the unit is turned off. Handle with care.
- Do not leave the appliance unattended when it is on.
- Do not cover the ventilation grills. Heat can cause inflammable products to ignite.
- Heat can cause inflammable products to ignite even when out of sight.
- Be careful with the remains of liquid tin. In contact with skin, it can cause burns.
- Avoid flux coming into contact with skin or eyes to prevent irritation.
- Be careful with the smoke produced when soldering.
- Keep your workplace clean and tidy. Wear appropriate protection glasses and gloves when working to avoid personal harm.
- This appliance can be used by children over the age of eight as well as persons with reduced physical, sensory or mental capabilities or lacking experience provided that they have been given adequate supervision or instruction concerning use of the appliance and understand the hazards involved. Children must not play with the appliance.
- Maintenance must not be carried out by children unless supervised.

Notes

[illegible]

Notes

Specifications

XL Preheater Set

PHXLE-1KA 120V. Input 120V 50/60Hz Fuse T20A

PHXLE-2KA 230V. Input 230V 50/60Hz Fuse T10A

PHXLE-9KA 100V. Input 100V 50/60Hz Fuse T20A

XL Preheater Unit

- Maximum Power: 5400W
- Heating Area (L x W):
 - Zone A 510 x 200 mm / 20 x 7.9 in
 - Zone B 510 x 410 mm / 20 x 16.1 in
 - Zone A+B 510 x 610 mm / 20 x 24 in
- Ambient Operating Temperature: 10 - 50 °C / 50 - 122 °F
- Temperature Range: 50 - 250 °C / 120 - 482 °F
- Temperature Measurement: Thermocouple type K
- JBCset Temperature Profiles: 3 profiles (2, 3 or 4 steps)
- User Profiles: 22 (up to 6 steps for each)
- Maximum Work Time: 600 min or indefinite
- Dimensions / Weight: 790 x 664 x 42 mm / 18 kg
(L x W x H) 31.1 x 26.1 x 1.65 in / 39.7 lb

XL PCB Support (PHXL-SA)

- Weight: 4.1 kg / 9 lb
- Dimensions (Low Position): 752.5 x 737 x 78 mm
(L x W x H) 29.6 x 29 x 3.1 in
- Dimensions (High Position): 752.5 x 737 x 98 mm
(L x W x H) 29.6 x 29 x 3.9 in

XL Preheater Set

- Total Net Weight: 23 kg / 50.7 lb
- Total Package Dimensions / Weight: 1200 x 800 x 374 / 68.5 kg
(L x W x H) 47.2 x 31.5 x 14.7 in / 151 lb

Complies with CE standards.
ESD protected.



Warranty

JBC's 2 year warranty covers this equipment against all manufacturing defects, including the replacement of defective parts and labour.

Warranty does not cover product wear or misuse.

In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased.

Get 1 extra year JBC warranty by registering here:
<https://www.jbctools.com/productregistration/>
within 30 days of purchase.



This product should not be thrown in the garbage.

In accordance with the European directive 2012/19/EU, electronic equipment at the end of its life must be collected and returned to an authorized recycling facility.

