

Keysight U1231A/ U1232A/U1233A Handheld Multimeter

Quick Start
Guide

Contacting Keysight

www.keysight.com/find/assist
(worldwide contact information for repair and service)

Safety and EMC Information

This meter is safety-certified in compliance with EN 61010-1 (IEC 61010-1:2001) for CAT-III 600 V, Pollution Degree II Environment.

EMC designed in compliance with EN61326-1. Use with standard or compatible test probes.

Safety Notices





CAUTION

A CAUTION notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a CAUTION notice until the indicated conditions are fully understood and met.

WARNING

A WARNING notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood and met.

Safety symbols

	Earth (ground) terminal
	Equipment protected throughout by double insulation or reinforced insulation
	Caution, risk of electric shock
	Caution, risk of danger (refer to this manual for specific Warning or Caution information)
CAT IV 600 V	Category III 600 V overvoltage protection

For further safety information details, refer to the
Keysight U1231A/U1232A/U1233A Handheld Multimeter User's Guide.



Verify that you received the following items in the shipment of your multimeter:

- ✓ One pair of red and black test leads
- ✓ Four 1.5 V AAA alkaline battery
- ✓ Printed copy of the U1231A/U1232A/U1233A Quick Start Guide

If any item is missing or damaged, keep the shipping materials and contact the nearest Keysight Sales Office.

NOTE

The descriptions and instructions in this guide apply to the U1231A, U1232A, and U1233A handheld multimeters.


The model U1233A appears in all illustrations.

All related documents and software are available for download at www.keysight.com/find/hhTechLib.

Install the Batteries

Your multimeter is powered by four 1.5 V AAA alkaline batteries (included with the shipment).

- 1 Turn the multimeter OFF and remove the test leads from the terminals.
- 2 Loosen the screw on the battery cover with a suitable Phillips screwdriver.
- 3 Remove the battery cover and observe the polarity markings.
- 4 Insert the batteries and replace the battery cover and screw.

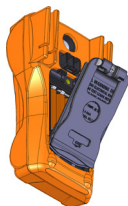

Turn On the Multimeter



To power ON your multimeter, turn the rotary switch to any other position.

Controlling the Multimeter Remotely





Your multimeter is capable of remote data logging.

To use this feature, you will need a PC running a Windows operating system, an IR-USB cable (U1173A, purchased separately), and the Keysight GUI Data Logger Software.


The Keysight GUI Data Logger software is downloadable for free from www.keysight.com/find/hhTechLib.



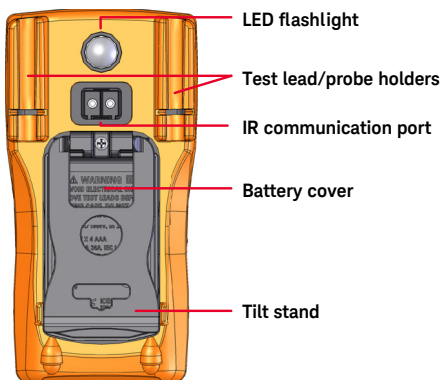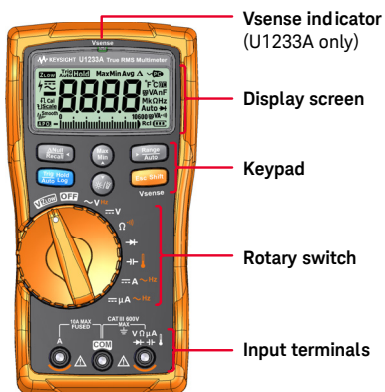









The Multimeter at a Glance



Understanding the Rotary Switch

NOTE

Some rotary switch positions have a *shifted* function printed in **orange**. Press  to switch between the shifted and regular function.

Legend	Functions shown in the primary display
	Low input impedance – VZ_{LOW} Auto (AC or DC)/ VZ_{LOW} DC V/ VZ_{LOW} AC V for eliminating ghost voltages
	AC V/Frequency
	DC V
	Resistance/Short continuity/Open continuity ^[a]
	Diode
	Capacitance/Temperature (U1233A only)
	Capacitance/Auxiliary Temperature (U1232A only)
	Capacitance (U1231A only)
	DC or AC A/Frequency
	DC or AC μA/Frequency
	Clamp-on AC or DC A/Frequency (U1231A only)
	Auxiliary Temperature (U1231A only)







[a] Open continuity option must be enabled through the multimeter's Setup (**oPnd** > **oPnE**). Open continuity is disabled by default.

WARNING













Remove the test leads from the measuring source or target before changing the rotary switch position.

Refer to the *U1231A/U1232A/U1233A User's Guide* for a complete list and description of all rotary switch labels for each separate multimeter model.

Understanding the Keypad

Legend	Key response when pressed for:	
	Less than 1 second	More than 1 second
	Sets the null/relative mode	Enters the Hold-Log Recall menu
	Starts the MaxMin recording	Stops the MaxMin recording
	Sets a manual range	Enables autoranging
	Freezes and stores the present reading in the display	Automatically freezes the present reading once the reading is stable
	Turns the LCD backlight on or off.	Turns the LED flashlight on or off.
	Switches between the regular and shifted (icons printed in orange) functions	U1233A only: Enables the non-contact voltage detector (Vsense).

Understanding the Input Terminals


Rotary position for U1232A and U1233A	Input terminals	Overload protection
		600 Vrms
      		600 Vrms for short circuit <0.3 A
 		11 A/1000 V, fast-acting fuse

Non-contact voltage detector (Vsense)

WARNING

Voltage could still be present even if there is no alert indication. Do not rely on the Vsense detector with shielded wire. Never touch live voltage or conductor without the necessary insulation protection.


The Vsense detector may be affected by differences in socket design, insulation thickness, and insulation type.

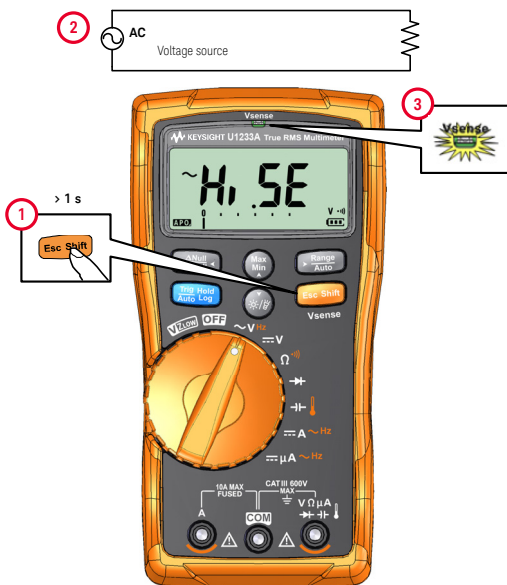**NOTE**

Press **Range Auto** to change the Vsense detector's sensitivity from **Hi.SE** (high sensitivity) to **Lo.SE** (low sensitivity).

Performing Measurements


AC voltage measurements

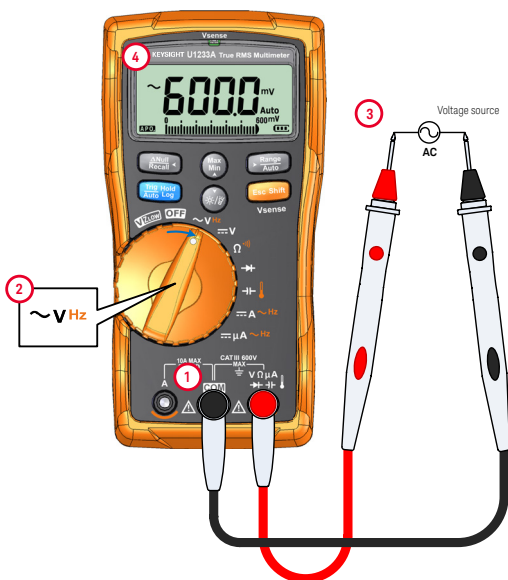


DC voltage measurement




Resistance measurement

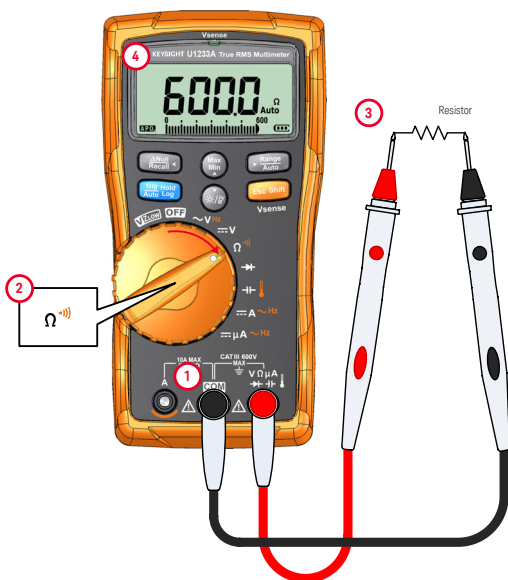


Continuity test

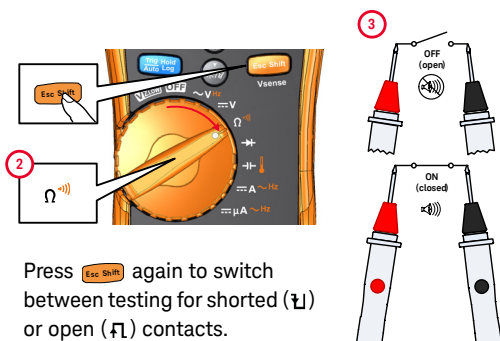

Forward bias diode test

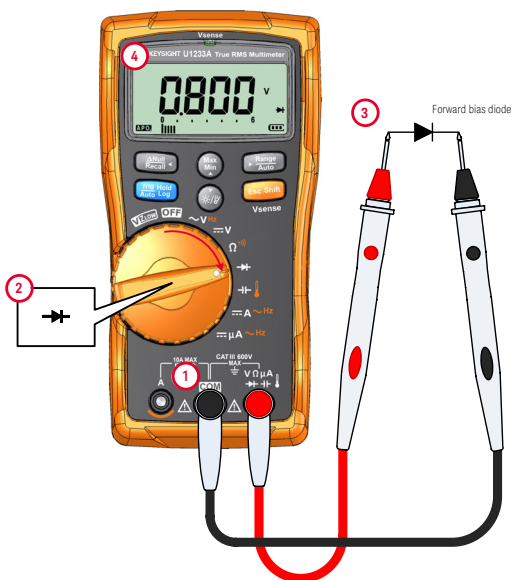


Reverse bias diode test

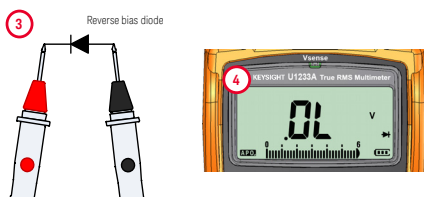

Capacitance measurement

CAUTION

To avoid possible damage to the multimeter or to the equipment under test, disconnect circuit power and discharge all high-voltage capacitors before measuring capacitance. Use the DC V function to confirm that the capacitor is fully discharged.

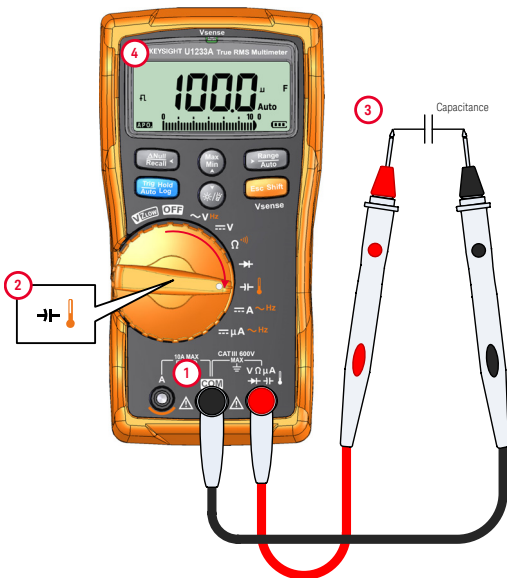
**NOTE**

⌚ is shown on the bottom left of the display when the capacitor is charging, and ⌚ is shown when the capacitor is discharging.

Temperature measurement

WARNING


Do not connect the thermocouple to electrically live circuits. Doing so will potentially cause fire or electric shock.

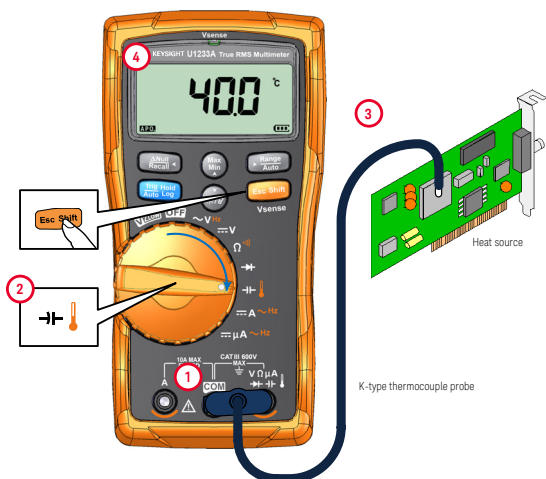**NOTE**

- The multimeter uses a type-K thermocouple probe (U1186A, purchased separately) for measuring temperature.
- For auxiliary temperature measurement on the U1231A and U1232A, a temperature module such as the U1586B (purchased separately) is required.


Current measurement (up to A)

WARNING Always use the proper function, range, and terminals for current measurements. Set the positive input terminal to the A terminal for currents above $600\ \mu\text{A}$.

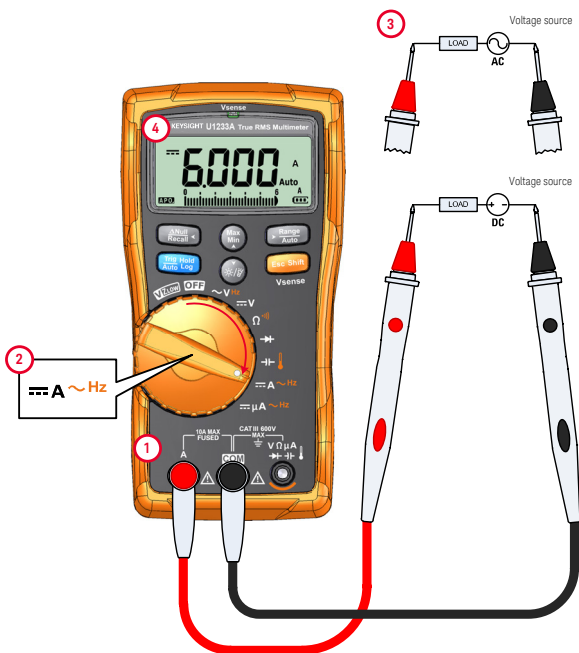


Current measurement (up to μA)**WARNING**

Always use the proper function, range, and terminals for current measurements. Set the positive input terminal to the μA terminal for currents below $600\ \mu\text{A}$.

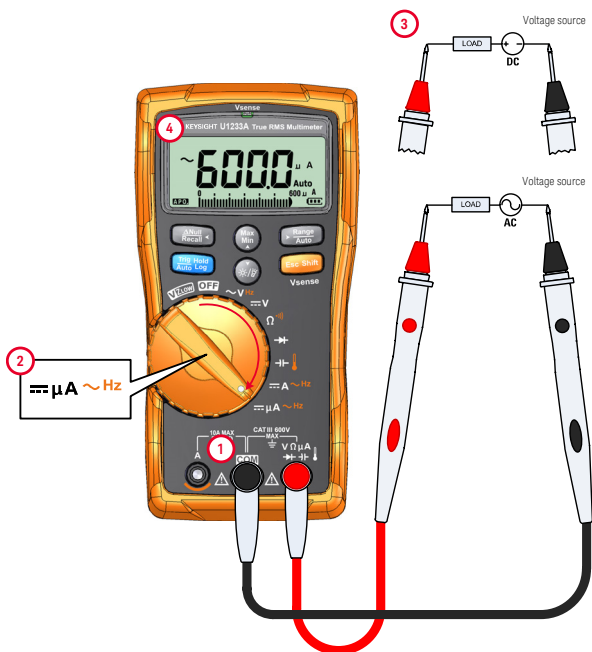

VZ_{LOW} measurement

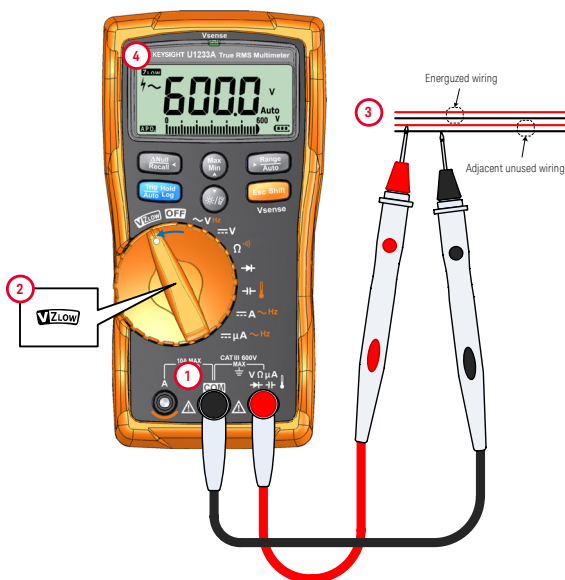

NOTE

Ghost voltages can be caused by capacitive coupling between energized wiring and adjacent unused wiring. Use the VZ_{LOW} function to eliminate ghost or induced voltages in your measurements.

This information is subject to change without notice. Always refer to the Keysight website for the latest revision.

© Keysight Technologies 2011 - 2017
Edition 4, July 1, 2017

Printed in Malaysia



U1231-90023

www.keysight.com